



The World Leader in Vibrating Wire Technology

*48 Spencer Street
Lebanon, NH 03766, USA
Tel: 603•448•1562
Fax: 603•448•3216
E-mail: geokon@geokon.com
<http://www.geokon.com>*

Instruction Manual
Model 4999
Terminal Box

No part of this instruction manual may be reproduced, by any means, without the written consent of Geokon, Inc.

The information contained herein is believed to be accurate and reliable. However, Geokon, Inc. assumes no responsibility for errors, omissions or misinterpretation. The information herein is subject to change without notification.

Copyright© 2012-2016 Geokon Inc. All Rights Reserved.
(Doc Rev E 11/23/2016)

Warranty Statement

Geokon, Inc. warrants its products to be free of defects in materials and workmanship, under normal use and service for a period of 13 months from date of purchase. If the unit should malfunction, it must be returned to the factory for evaluation, freight prepaid. Upon examination by Geokon, if the unit is found to be defective, it will be repaired or replaced at no charge. However, the WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion or current, heat, moisture or vibration, improper specification, misapplication, misuse or other operating conditions outside of Geokon's control. Components which wear or which are damaged by misuse are not warranted. This includes fuses and batteries.

Geokon manufactures scientific instruments whose misuse is potentially dangerous. The instruments are intended to be installed and used only by qualified personnel. There are no warranties except as stated herein. There are no other warranties, expressed or implied, including but not limited to the implied warranties of merchantability and of fitness for a particular purpose. Geokon, Inc. is not responsible for any damages or losses caused to other equipment, whether direct, indirect, incidental, special or consequential which the purchaser may experience as a result of the installation or use of the product. The buyer's sole remedy for any breach of this agreement by Geokon, Inc. or any breach of any warranty by Geokon, Inc. shall not exceed the purchase price paid by the purchaser to Geokon, Inc. for the unit or units, or equipment directly affected by such breach. Under no circumstances will Geokon reimburse the claimant for loss incurred in removing and/or reinstalling equipment.

Every precaution for accuracy has been taken in the preparation of manuals and/or software, however, Geokon, Inc. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages or losses that result from the use of the products in accordance with the information contained in the manual or software.

Table of Contents

1. INTRODUCTION	1
2. MOUNTING THE TERMINAL BOX	2
3. CONNECTING THE SENSORS TO THE TERMINAL BLOCKS.....	2
4. WIRING DIAGRAMS	3
MODEL 4999-11-4S	4
MODEL 4999-11-8S	5
MODEL 4999-16VTS.....	6
MODEL 4999-32VTS.....	7
MODEL 4999-32VWS	8
5. SPECIFICATIONS	9
APPENDIX A. MODEL 8032-27 AND LOAD CELL WIRING.....	10

1. INTRODUCTION

The Model 4999 Terminal Box is intended for use with Geokon Vibrating Wire Sensors with or without Thermistors. Various models are available:

- Model 4999-11-2S for up to 2 VW Sensors with Thermistors
- Model 4999-11-4S for up to 4 VW Sensors with Thermistors
- Model 4999-11-8S for up to 8 VW Sensors with Thermistors
- Model 4999-16VTS for up to 16 VW Sensors with Thermistors
- Model 4999-32VTS for up to 32VW Sensors with Thermistors
- Model 4999-32VWS for up to 32 VW Sensors only. (Without Thermistors)

The Terminal Box makes it easy to manually connect a Readout Box (GK-404 or GK-405), to a variety of vibrating wire sensors by means of color-coded terminal posts, mounted below the rotary switches on the face panel of the Terminal Box, to which the flying leads (patch cord) of the readout box can be clipped. The rotary switch is used to select which “channel” or sensor is being read by the Readout Box.

The cables from the sensors are passed into the Terminal Box interior through weather tight entries mounted on the bottom or side of the enclosure. It is important that any unused cable entries be sealed off by tightening the unused nylon cord grips onto the white plastic plugs provided for that purpose.

The sensors are protected from over-voltages by means of Gas Discharge Tubes mounted on the terminal boards. An earth ground lug is provided on the outside of the enclosure for connection to an earth ground rod.

The Terminal Box is a NEMA 4X style enclosure, environmentally protected (weatherproof) by means of a hinged cover that has a seamless “foamed-in-place” gasket that is pressed firmly against the enclosure when the two clamps holding the cover are closed. The Terminal Box itself is made from fiberglass reinforced polyester.

Polyester mounting brackets with bolt-holes, on top and bottom of the Terminal Box, allow it to be bolted to any vertical surface.

2. MOUNTING THE TERMINAL BOX

The Terminal Box should be mounted to a flat vertical surface using the holes in the mounting brackets, or “feet”, at the top and bottom of the enclosure. For the over-voltage surge protection to be effective the earth ground lug on the outside of the Terminal Box needs to be connected by a thick copper wire to an earth ground. This can be a copper rod driven into the ground or, metal objects, such as plumbing pipes, or electrical conduits, etc, which are themselves well grounded. Copper earth grounding rods and ground wire straps are available as accessories.

3. CONNECTING THE SENSORS TO THE TERMINAL BLOCKS

The Terminal Box uses spring-loaded type terminal blocks.

Pass the sensor cable through the water tight entry into the inside of the Terminal Box and connect to the appropriate 5-position, spring-loaded terminal block, following the instructions of the appropriate wiring diagram. Refer to the wiring diagram fixed to the inside of the cover, or to the wiring diagram in Section 4 of this manual. When using the spring type terminals to make the connection, depress the spring lever, poke the bare wire into the adjacent hole and then release the spring. Check that a good connection has been made by tugging on the lead wire. After the connections have been made, tighten the nut on the waterproof connector. **This must be done to ensure that water does not enter the enclosure.**

4. WIRING DIAGRAMS

Model 4999-11-2S

2 Vibrating Wire Gages with 2 Thermistors

FRONT PANEL

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:

Boot Color	Switch Plate Post Label
Red	Gage +
Black	Gage -
White	Thermistor
Green	Thermistor
Blue	Cable Shield

TERMINAL BOARD WIRING

Attach the various gage cable wires to the terminal blocks in the order below.

Label	Gage Number	Gage Wire Color
1H	1	Red
1L		Black
2H		White
2L		Green
S		Shield
3H	2	Red
3L		Black
4H		White
4L		Green
S		Shield

Model 4999-11-4S

4 Vibrating Wire Gages with 4 Thermistors

FRONT PANEL

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:

Boot Color	Switch Plate Post Label
Red	Gage +
Black	Gage -
White	Thermistor
Green	Thermistor
Blue	Cable Shield

TERMINAL BOARD WIRING

Attach the various gage cable wires to the terminal blocks in the order below.

Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color
1H	1	Red	5H	3	Red
1L		Black	5L		Black
2H		White	6H		White
2L		Green	6L		Green
S		Shield	S		Shield
3H	2	Red	7H	4	Red
3L		Black	7L		Black
4H		White	8H		White
4L		Green	8L		Green
S		Shield	S		Shield

Model 4999-11-8S

8 Vibrating Wire Gages with 8 Thermistors

FRONT PANEL

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:

Boot Color	Switch Plate Post Label
Red	Gage +
Black	Gage -
White	Thermistor
Green	Thermistor
Blue	Cable Shield

TERMINAL BOARD WIRING

Attach the various gage cable wires to the terminal strips in the order below.

Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color
1H	1	Red	9H	5	Red
1L		Black	9L		Black
2H		White	10H		White
2L		Green	10L		Green
S		Shield	S		Shield
3H	2	Red	11H	6	Red
3L		Black	11L		Black
4H		White	12H		White
4L		Green	12L		Green
S		Shield	S		Shield
5H	3	Red	13H	7	Red
5L		Black	13L		Black
6H		White	14H		White
6L		Green	14L		Green
S		Shield	S		Shield
7H	4	Red	15H	8	Red
7L		Black	15L		Black
8H		White	16H		White
8L		Green	16L		Green
S		Shield	S		Shield

Model 4999-16VTS

16 Vibrating Wire Gages with 16 Thermistors

FRONT PANEL

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:

Boot Color	Switch Plate Post Label
Red	Gage +
Black	Gage -
White	Thermistor
Green	Thermistor
Blue	Cable Shield

Note: To read positions 9 through 16 the first switch on the face panel (1-8) must be set to "9-16."

TERMINAL BOARD WIRING

Attach the various gage cable wires to the terminal strips in the order below.

Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color
1H	1	Red	9H	5	Red	17H	9	Red	25H	13	Red
1L		Black	9L		Black	17L		Black	25L		Black
2H		White	10H		White	18H		White	26H		White
2L		Green	10L		Green	18L		Green	26L		Green
S		Shield	S		Shield	S		Shield	S		Shield
3H	2	Red	11H	6	Red	19H	10	Red	27H	14	Red
3L		Black	11L		Black	19L		Black	27L		Black
4H		White	12H		White	20H		White	28H		White
4L		Green	12L		Green	20L		Green	28L		Green
S		Shield	S		Shield	S		Shield	S		Shield
5H	3	Red	13H	7	Red	21H	11	Red	29H	15	Red
5L		Black	13L		Black	21L		Black	29L		Black
6H		White	14H		White	22H		White	30H		White
6L		Green	14L		Green	22L		Green	30L		Green
S		Shield	S		Shield	S		Shield	S		Shield
7H	4	Red	15H	8	Red	23H	12	Red	31H	16	Red
7L		Black	15L		Black	23L		Black	31L		Black
8H		White	16H		White	24H		White	32H		White
8L		Green	16L		Green	24L		Green	32L		Green
S		Shield	S		Shield	S		Shield	S		Shield

Model 4999-32VTS

32 Vibrating Wire Gages with 32 Thermistors

Front Panel

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:


Boot Color	Switch Plate Post Label
Red	Gage +
Black	Gage -
White	Thermistor
Green	Thermistor
Blue	Cable Shield

Note: To read positions 9 through 16 the first switch (1-8) must be set to "9-16."

To read positions 17 through 24 the first switch must be set to "17-24."

To read positions 25 through 32 the first switch must be set to "25-32."

Terminal Board Wiring: There are two terminal boards mounted to the lower plate. Wire the first 16 gages and thermistors to the Board 1 as indicated in the drawing. Wire gages and thermistors 17 through 32 to the Board 2.

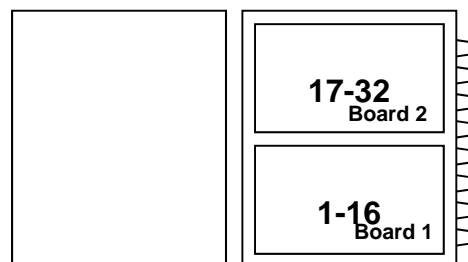

Attach the gage cable wires to the terminal strips in the order below:

Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color
1H	1 or 17	Red	9H	5 or 21	Red	17H	9 or 25	Red	25H	13 or 29	Red
1L		Black	9L		Black	17L		Black	25L		
2H		White	10H		White	18H		White	26H		White
2L		Green	10L		Green	18L		Green	26L		Green
S		Shield	S		Shield	S		Shield	S		Shield
3H	2 or 18	Red	11H	6 or 22	Red	19H	10 or 26	Red	27H	14 or 30	Red
3L		Black	11L		Black	19L		Black	27L		Black
4H		White	12H		White	20H		White	28H		White
4L		Green	12L		Green	20L		Green	28L		Green
S		Shield	S		Shield	S		Shield	S		Shield
5H	3 or 19	Red	13H	7 or 23	Red	21H	11 or 27	Red	29H	15 or 31	Red
5L		Black	13L		Black	21L		Black	29L		Black
6H		White	14H		White	22H		White	30H		White
6L		Green	14L		Green	22L		Green	30L		Green
S		Shield	S		Shield	S		Shield	S		Shield
7H	4 or 20	Red	15H	8 or 24	Red	23H	12 or 28	Red	31H	16 or 32	Red
7L		Black	15L		Black	23L		Black	31L		Black
8H		White	16H		White	24H		White	32H		White
8L		Green	16L		Green	24L		Green	32L		Green
S		Shield	S		Shield	S		Shield	S		Shield

Model 4999-32VWS

32 Vibrating Wire Gages

FRONT PANEL

Connect the patch cord (flying leads) for a GK-403 or GK-404 as follows:

Boot Color	Switch Plate Post Color
Red	Red (Gage +)
Black	Black (Gage -)
Blue	Blue (Cable Shield)

NOTE: Gages connected to positions 1 through 16 on the terminal board are selected with the left hand rotary switch. Gages connected to positions 17 through 32 on the terminal board are selected with the right hand rotary switch.

To read positions 1 through 8: Connect patch cord clip leads to the posts labeled "1-8."

To read positions 9 through 16: Connect patch cord clip leads to the posts labeled "9-16."

To read positions 17 through 24: Connect patch cord clip leads to the posts labeled "17-24."

To read positions 25 through 32: Connect patch cord clip leads to the posts labeled "25-32."

TERMINAL BOARD WIRING

Attach the various gage cable wires to the terminal strips in the order below.

Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color	Label	Gage Number	Gage Wire Color
1H	1	Red	9H	9	Red	17H	17	Red	25H	25	Red
1L		Black	9L		Black	17L		Black	25L		Black
2H	2	Red	10H	10	Red	18H	18	Red	26H	26	Red
2L		Black	10L		Black	18L		Black	26L		Black
S	1 & 2	Shield	S	9 & 10	Shield	S	17 & 18	Shield	S	25 & 26	Shield
3H	3	Red	11H	11	Red	19H	19	Red	27H	27	Red
3L		Black	11L		Black	19L		Black	27L		Black
4H	4	Red	12H	12	Red	20H	20	Red	28H	28	Red
4L		Black	12L		Black	20L		Black	28L		Black
S	3 & 4	Shield	S	11 & 12	Shield	S	19 & 20	Shield	S	27 & 28	Shield
5H	5	Red	13H	13	Red	21H	21	Red	29H	29	Red
5L		Black	13L		Black	21L		Black	29L		Black
6H	6	Red	14H	14	Red	22H	22	Red	30H	30	Red
6L		Black	14L		Black	22L		Black	30L		Black
S	5 & 6	Shield	S	13 & 14	Shield	S	21 & 22	Shield	S	29 & 30	Shield
7H	7	Red	15H	15	Red	23H	23	Red	31H	31	Red
7L		Black	15L		Black	23L		Black	31L		Black
8H	8	Red	16H	16	Red	24H	24	Red	32H	32	Red
8L		Black	16L		Black	24L		Black	32L		Black
S	7 & 8	Shield	S	15 & 16	Shield	S	23 & 24	Shield	S	31 & 32	Shield

5. SPECIFICATIONS

Tripolar Plasma Surge Arrestor

Nominal DC Breakdown Voltage: 230V

Surge Life: 400 (10/1000 ms pulse @ 500 A)

Maximum Surge Current: 10 kA per side (8/20 μ s pulse)

Insulation Resistance: 10000 M Ω

Operating Temperature: -65 to +125° C

Bipolar Plasma Surge Arrestor

Nominal DC Breakdown Voltage: 300V

Surge Life: 1000 (10/1000 μ s pulse @ 500 A)

Maximum Surge Current: 20 kA (8/20 μ s pulse)

Insulation Resistance: 10000 M Ω

Operating Temperature: -65 to +125° C

APPENDIX A. MODEL 8032-27 AND LOAD CELL WIRING

Connect the “common” VW- conductor from the load cell to the 8032-27 by lifting up on the orange tab located on the opposite side of the six black conductors, inserting the common conductor fully into the 8032-27 (Figure 1), and then pushing down on the orange tab until it snaps into place. Refer to Table 1 to identify which conductor carries the common VW- signal.

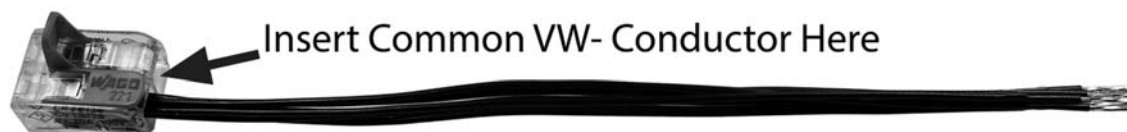


Figure 1 - Model 8032-27 Jumper Wire Assembly

10 pin Bendix PT06A-12-10P	Function	3 Gage VW Load Cell, Purple Cable	4 Gage VW Load Cell, Purple Cable	6 Gage VW Load Cell, Orange Cable
H	Common	White's Black*	Green	Blue

*White's black and Green wires are switched on Geokon 3 gage VW load cells prior to serial number 3313.

Table 1 -Common Conductor Chart

The following wiring charts detail the connections between the load cell and 8032-27 with the terminal board:

4999-11-4S

Terminal Board	Vibrating Wire with Thermistor
1H	VW Sensor #1
1L	8032-27
2H	Thermistor
2L	Thermistor
SHIELD	Shield Drain Wire
3H	VW Sensor #2
3L	8032-27
4H	-
4L	-
SHIELD	-
5H	VW Sensor #3
5L	8032-27
6H	-
6L	-
SHIELD	-
7H	VW Sensor #4
7L	8032-7
8H	-
8L	-
SHIELD	-

4999-11-8S

Terminal Board	Vibrating Wire with Thermistor
1H	VW Sensor #1
1L	8032-27
2H	Thermistor
2L	Thermistor
SHIELD	Shield Drain Wire
3H	VW Sensor #2
3L	8032-27
4H	-
4L	-
SHIELD	-
5H	VW Sensor #3
5L	8032-27
6H	-
6L	-
SHIELD	-
•	•
•	•
•	•
11H	VW Sensor #6
11L	8032-7
12H	-
12L	-
SHIELD	-

4999-16VTS

Terminal Board	Vibrating Wire with Thermistor
1H	VW Sensor #1
1L	8032-27
2H	Thermistor
2L	Thermistor
S1	Shield Drain Wire
3H	VW Sensor #2
3L	8032-27
4H	-
4L	-
S2	-
5H	VW Sensor #3
5L	8032-27
6H	-
6L	-
S3	-
•	•
•	•
•	•
11H	VW Sensor #6
11L	8032-7
12H	-
12L	-
S6	-