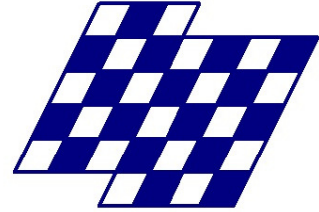

GEL Instrumentation
Pty Ltd



User Instructions

Model 404

**Intrinsically Safe
Vibrating Wire Readout**

Contents

1	Introduction	3
2	Intrinsically Safe Parameters	4
3	Principle of Operation	4
4	Front Panel and Connections	5
5	User Operation	7
5.1	POS (POSITION) BUTTON	9
5.2	MODE BUTTON	9
5.3	CFG (CONFIGURATION) BUTTON	9
6	Low Battery Indication and Auto-Off	11
7	Maintenance	12
8	Calibration	13
9	Troubleshooting	13
10	Specifications	14
11	Accessories	15
12	Connector Pin Outs	15

1 Introduction

The Model 404 Vibrating Wire (VW) Readout is designed to monitor and read vibrating wire type sensors, such as piezometers, uniaxial and biaxial stressmeters.

Based on the Geokon GK-404 VW readout, the Model 404 has been approved as intrinsically safe for use in underground coal mines to IECEx.ia. It is housed in a rugged, splash proof, stainless steel case and comes with a protective cover.

Designed as a hand held unit, the tactile membrane keypad allows single handed use, while the large, backlit display allows easy reading in underground situations. The battery source is inbuilt, and rechargeable, and the unit comes complete with a wall charger for use outside of hazardous areas.

Operation is the same as for the Geokon GK-404, and allows reading of vibrating wire sensors over a range of frequency sweeps and units, including digits ($\text{Hz}^2 \times 10^{-3}$), period (μs) and frequency (Hz).

In hazardous environments the Model 404 can only be used with specifically designated sensors manufactured by Geokon Inc. The Intrinsic Safety certification is for the readout in combination with those sensors - it cannot be used in hazardous environments with any other sensors, regardless of their characteristics.

If the readout, wiring and sensor are all located in a non-hazardous area the Model 404 can be used to monitor any vibrating wire sensor that will respond to one of the six excitation states, listed on page 8.



Figure 1 – GEL Instrumentation Model 404 VW Readout (in carry bag)

2 Intrinsically Safe Parameters

Approval for use in underground coal mines has been given by Simtars, by way of certification IECEx SIM 13.0014X. The equipment and associated sensors have been assessed as compliant to the following standards:

IEC 60079-0:2011
IEC 60079-11:2011

The Model 404 readout can be used in temperatures ranging from -20°C to 40°C.

The certification for the Model 404 readout states the following information, also recorded on the front of the unit:

<i>Manufacturer:</i>	GEL Instrumentation Pty Ltd
<i>Equipment:</i>	Vibrating Wire Readout
<i>Type:</i>	Model 404
<i>Grouping and Classification:</i>	Ex ia I IP54
<i>Serial Number:</i>	<i>(unique identifier stamped at the bottom of the faceplate)</i>
<i>Certificate Number:</i>	IECEx SIM 13.0014X
<i>Additional Marking:</i>	U_m : 9.2 V

Sensors that are certified for use with the Model 404 in hazardous environments are manufactured by Geokon Inc. and will be marked as **Type 1, Type 2, Type 3** or **Type 4**. They are labelled with the following information as a minimum:

<i>Sensor Type:</i>	Type 1/2/3/4 (as appropriate)
<i>Serial Number:</i>	<i>(unique identifier for that sensor)</i>
<i>Certificate Number:</i>	IECEx SIM 13.0014X

The maximum permissible cable length between the Model 404 readout and an approved sensor is 1000 metres.

There are no user serviceable parts within the Model 404 readout or associated sensors. Should the equipment be faulty, or damage occurs to the outer case, contact the manufacturer to organise repair or replacement.

On no account should the user attempt to open the case, or repair the readout or sensors.

The supplied lead can be modified by fitting a different sensor connector (in place of the alligator clips) by the user, or the readout can be supplied with a custom lead, and the sensors a custom plug, if required.

Only the supplied charger should be used to charge the readout. Charging can only take place in a safe environment – do not attempt to charge the readout in a hazardous atmosphere.

3 Principle of Operation

The Model 404 is designed to excite and read a vibrating wire instrument, typically installed to monitor pressure or stress. An on board microprocessor generates a variable frequency square wave of 5V amplitude, varying the frequency in a sweep from a lower to an upper bound, according to the position selected. This wave is sent through the red and black wires of the sensor cable to excite the coils of the sensor connected and vibrate or 'pluck' the wire in the sensor. The circuit then 'listens' to the frequency the wire is vibrating at, converts this to the units required and displays it on the LCD display.

At the same time the circuit measures the resistance of the thermistor within the sensor, converts this to a temperature and displays it on the second line of the LCD display.

By choosing a 'position' for the readout the user can select the frequency sweep the readout will use. Within each 'position' there are a number of units selectable, to choose how the reading will be displayed.

The LCD is back lit and has variable contrast, both of which can be controlled by the user via the configuration menu. An auto power off function is also provided.

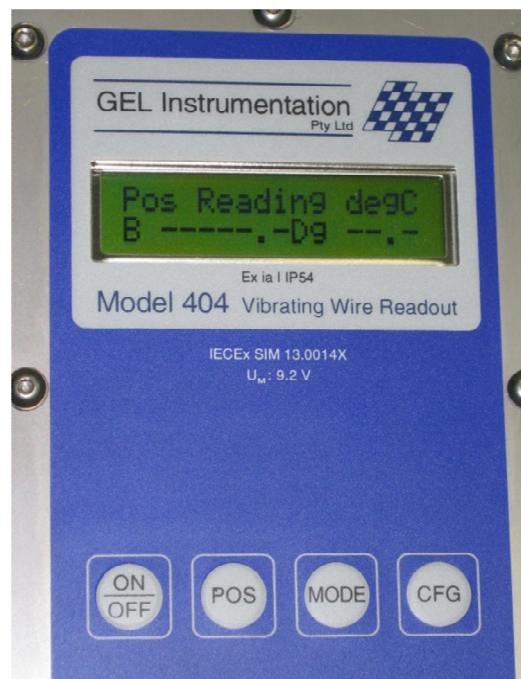


Figure 2 - Front Panel of Model 404 Readout

4 Front Panel and Connections

The Model 404 readout is controlled using four membrane push buttons on the front. These buttons are provided with tactile feedback and have different functions depending upon the operating mode.

The buttons are:

- (1) **ON/OFF** - turns the unit on and off
- (2) **POS** - changes the reading 'position' in operating mode or the menu option in configuration mode
- (3) **MODE** - changes the units in operating mode or the menu option setting in configuration mode
- (4) **CFG** - enters or leaves the configuration mode.

Above the buttons is (5) the display, a 16 column by 2 line back lit LCD with adjustable contrast.

On top of the unit is (6) the sensor socket where a lead is connected to allow the field mounted transducers to be connected to the readout for readings to be taken.

On the right side of the unit is (7) the charging connector socket, where the supplied wall charger can be connected to allow charging of the readout. A battery meter is available within the configuration menu and a low battery warning will appear if the battery voltage drops too far.



Figure 3 – GEL Instrumentation Model 404 Vibrating Wire Readout (main features)

5 User Operation

Before use the Model 404 VW readout should be charged fully. Normally a full charge will give seven hours continuous operation, or longer if the unit is switched off while not actively reading sensors.

The Model 404 is supplied with a lead for connecting the readout to sensors. The lead consists of a plug that mates with the socket on the top of the unit, with the other end terminate in alligator plugs connected to each of the individual coloured wires.

Note: *The lead pictured is the standard. If different connectors are required for the sensor connection (instead of the alligator clips) please contact the manufacturer and custom cables can be provided.*



Figure 4 – Standard Sensor Lead Supplied with Model 404 Readout

The wires and the boots on the alligator clips are colour coded to match those of the sensor wires, that is **red** for the positive vibrating wire gauge lead, **black** for the negative vibrating wire gauge lead, **green** for the positive thermistor lead, **white** for the negative thermistor lead and **blue** for the transducer drain wire.

NOTE: *These colours are typical for Geokon sensors containing a single coil. Where there are multiple coils within a sensor (such as 4350BX Biaxial Stressmeters) or sensors from a different manufacturer are used, please consult the user manual for that sensor.*

The plug of the lead should be connected to the socket on top of the Model 404, the alligator clips to the corresponding wires of the sensor, and the unit turned on by pressing the ON/OFF button.



Figure 5 – Sensor Cable Connected to Readout

The initial screen on the LCD will display the following:

**GEL Inst .
Model-404 v1.1**

After a delay of around a second the readout will start taking readings and show a screen that looks similar to the following:

**Pos Reading degC
B -----.-Dg --.-**

In this example the readout has been setup in the default configuration of reading position B and there is no sensor connected, hence the dashes in the second line. With a sensor connected the display will look something like the following:

**Pos Reading degC
B 8906.2Dg 17.3**

The position (frequency sweep) and units can be selected by the user by way of the POS and MODE buttons.

Table 1 – Sweep and Unit Settings for Model 404 Readout

POS	Use with Geokon Model No.	MODE	Calculation	Units	Frequency Sweep (Hz)
A	All	Dg Hz μS	$F^2 \times 10^{-3}$ F T	Digits Hertz μSec	450 – 6000
B	4300BX, 4350BX, 4400, 4500, 4600, 4700, 4800, 4900	Dg Hz μS	$F^2 \times 10^{-3}$ F T	Digits Hertz μSec	1500 – 3500
C	4000	μE Hz μS	$F^2 \times 10^{-3} \times 4.062$ F T	μStrain (μE) Hertz μSec	450 – 1200
D	4200	μE Hz μS	$F^2 \times 10^{-3} \times 3.304$ F T	μStrain (μE) Hertz μSec	450 – 1200
E	4100	μE Hz μS	$F^2 \times 10^{-3} \times 0.39102$ F T	μStrain (μE) Hertz μSec	1500 – 6000
F	4300EX, 4350BX	Dg Hz μS	$F^2 \times 10^{-3}$ F T	Digits Hertz μSec	2500 – 6000

Where F = Frequency (in hertz)
 T = Period (1/F, in microseconds)

5.1 POS (POSITION) BUTTON

In operating mode pressing the **POS** button will change the frequency sweep of the pluck between one of six preconfigured ranges. Each press of the **POS** button will step to the next position, from **A** to **F**. The range is changed to suit the sensor being read with the most commonly position being position B, for Geokon 4500 piezometers and 4300BX stressmeters.

5.2 MODE BUTTON

In operating mode pressing the **MODE** will step between the three unit types available for each position. The format for the vibrating wire reading steps between Dg (digits or $\text{Hz}^2 \times 10^{-3}$), Hz (hertz), μS (period) or μE (microeulers or microstrain) for each press of the **MODE** button, depending upon the position selected.

The Table 1 lists each position from **A** to **F**, the units available and the frequency sweep used. The sensors listed are the typical Geokon models suited to each position, but other makes and models can be used according to the required scaling and processing requirements.

5.3 CFG (CONFIGURATION) BUTTON

In operating mode, pressing the **CFG** button will put the readout into configuration mode. This allows the changing of a number of operating parameters of the readout by way of the configuration menu. When **CFG** button is pressed the following is displayed on the LCD:

Model 404 v1.1
Config Menu

After a short delay the first menu entry is shown as below:

BACKLIGHT: Press
<MODE> for ON/OFF

Pressing **POS** will step through each of the configuration menu entries, pressing **MODE** will toggle through the options available for that menu entry. The four entries and their options are:

BACKLIGHT:

Press **MODE** momentarily to toggle the LCD display backlight ON or OFF (default).

BATTERY:

This is for display only. A bar graph will show the current voltage level of the inbuilt rechargeable battery supply. If it is filled all the way to the right (or **F**) this represents 7.2V, the nominal voltage of the battery pack. If no bars are showing (or **E**) this represents 5.0V, which is the automatic cut out level of the readout where it will automatically shut down.

CONTRAST:

Press **MODE** to adjust the contrast of the LCD in 10% increments (default 50%).

AUTO-OFF:

The readout is configured with an auto power off setting. Press **MODE** to toggle through the options: 5 minutes (default), 15 minutes, 30 minutes or Disabled. After the specified time has elapsed without any of the front panel buttons being pressed the unit will automatically save any configuration changes and turn off. If the Disabled option is selected the readout will continue to run until the battery reaches 5.0V or the **ON/OFF** button is pressed.

The readout can be taken out of configuration mode and returned to operating mode at any time by pressing **CFG**.

The factory default settings can be restored by holding **CFG** and **POS** while turning the Model 404 on. The default settings are:

POS	B
MODE	Dg
BACKLIGHT	ON
CONTRAST	50%
AUTO-OFF	5 minutes

6 Low Battery Indication and Auto-Off

The power for the Model 404 readout comes from a battery pack consisting of six 200mA NiMH battery cells encapsulated in a silicone elastomer. The nominal voltage is 7.2V, but this can be higher at the end of a charge cycle. The circuit will no longer work once the battery voltage drops below 5.0V.

To prevent exhaustion of the batteries the readout is programmed to warn of low batteries, and automatically shut down if required. Should the battery voltage fall below 5.4V a message will appear on the LCD saying **Battery Low**. The readout should be placed on charge at this time.

Should the voltage fall below 5.0V the message

**RECHARGE
BATTERIES !**

will appear and the Model 404 will shut itself down. All configuration settings will be saved prior to shut down.

NOTE: *The readout can only be charged in a safe environment – do not attempt to charge it in a hazardous atmosphere.*



Figure 6 – Battery Charger for Model 404 Readout

7 Maintenance

There are no user serviceable parts inside the Model 404 Readout. Opening the case or damage to the membrane facia may interfere with the intrinsic safety performance of the unit and any readout that has been altered or damaged must not be used in a hazardous environment.

The internal Nickel Metal Hydride (NiMH) batteries will last for up to 1000 charge cycles, after which the operating time between charges will start to reduce. The batteries can be replaced only by sending the readout back to the manufacturer. They are encapsulated in a potting compound and any damage or removal of that compound will void the intrinsic safety certification.

Battery life can be maximised by regular charging of the readout. Even when fully charged the batteries will be flattened after a few weeks so it is important to keep the unit on charge when not in use. If the **Batteries Low** indication is seen it is recommended that the readout be charged overnight for 14 hours. If partially discharged a shorter charge time is sufficient. Only the supplied charger should be used, note that there is no indicator on the charger to show that it is charging the batteries, or that the charge is complete.

The dust cover on the charge socket should be inserted after charging is complete, to prevent dust or dirt filling the socket and preventing the plug fitting. If dust does build up in the socket a soft brush can be used to clear the dirt away – otherwise return the readout to the manufacturer for cleaning.

The case can be cleaned using a damp cloth. Avoid the use of solvents as these may damage the material of the keypad and/or soften the adhesive attaching it to the case.

The Model 404 comes supplied with a durable canvas carry bag which will protect the readout in most situations. The readout can be operated without being removed from the carry bag. The dust cover for the charge socket, as well as one for the sensor socket, are attached to the carry bag and should be used to keep dust out of the sockets.



Figure 7 – The back of the carry bag has a pouch for the sensor cable

8 Calibration

The readout should be returned to the manufacturer every twelve months for checking, cleaning and calibration. A calibration sticker on the readout will indicate when it is due to be returned.

9 Troubleshooting

Below are a few common problems with the Model 404 readout, along with suggested solutions. There are no user-serviceable parts inside the readout so if the problem is not listed below, or the solutions do not work, please contact the manufacturer for advice.

Readout will not turn on

There may be a problem with the internal batteries. Charge the unit overnight, and if it still will not turn on, contact the manufacturer. If it will power on check the battery meter to see if it is fully charged. If the battery life after charging is less than four hours the unit will need to be returned to the manufacturer for battery replacement.

Vibrating wire reading shows dashes

Check the connections to the sensor. If they are ok try using the Model 404 readout on another sensor, preferably one known to be working. If still unsuccessful contact the manufacturer to arrange return and repair of the readout.

Vibrating wire reading is unstable

Check the correct position has been selected for the sensor. Normally this will be the **B** position for piezometers and stress meters, press the **POS** button if necessary to select the correct position.

If the position is correct the sensor is either marginal or there may be a strong source of electromagnetic interference nearby.

Thermistor (temperature) reading shows dashes

As for the reading above, check the connection to the sensor wires. If they are ok try using the Model 404 readout on another sensor, preferably one known to be working. If still unsuccessful contact the manufacturer to organise return and repair of the readout.

Make sure the sensor has been supplied with a thermistor option fitted!

10 Specifications

Vibrating Wire Readout

Excitation Range: 400 Hz to 6000 Hz, 5 volt square wave

Measurement Resolution: 0.1 Hz
0.1 μ S
0.1 digit

Measurement Accuracy: $\pm 0.025\%$ of full scale (6000 Hz)

Temperature Readout

Sensor Type: Thermistor, YSI 44005, Dale #1C3001-B3, Alpha #13A3001-B3

Sensor Accuracy: $\pm 0.5^{\circ}\text{C}$

Measurement Range: -15°C to $+60^{\circ}\text{C}$

Measurement Resolution: 0.1°C

Measurement Accuracy: $\pm 1.0\%$ of full scale

Physical

Display: 16 columns x 2 lines LCD, backlit, variable contrast

Dimensions: 165mm (H) x 110mm (W) x 45mm (D)

Weight: 1020 grams

Temperature Range: Hazardous 0 $^{\circ}\text{C}$ to 40 $^{\circ}\text{C}$
Non-hazardous -20 $^{\circ}\text{C}$ to +50 $^{\circ}\text{C}$

Battery: Internal and encapsulated NiMH pack, nominal 7.2V DC

Operating Time: minimum 7 hours continuous at +25 $^{\circ}\text{C}$

11 Accessories

The Model 404 Vibrating Wire Readout is supplied with the following accessories:

- Vibrating wire sensor interconnect cable (flying leads, other connector available by request)
- Model 404 Vibrating Wire Readout User Instructions
- Wall charger
- Carry case with shoulder strap

12 Connector Pin Outs

Transducer plug – Lemo 5-pin HGG.2B.305.CLLP

Pin	Wire Colour	Alligator Clip Boot Colour	Description
1	Red	Red	VW Coil +
2	Black	Black	VW Coil -
3	Green	Green	Thermistor +
4	White	White	Thermistor -
5	Bare	Blue	Drain Wire