

GEOKON®

48 Spencer Street
Lebanon, NH 03766, USA
Tel: 603-448-1562
Fax: 603-448-3216
Email: geokon@geokon.com
<http://www.geokon.com>

Instruction Manual
Model 1900
Magnetic Extensometer



No part of this instruction manual may be reproduced, by any means, without the written consent of GEOKON®. The information contained herein is believed to be accurate and reliable. However, GEOKON® assumes no responsibility for errors, omissions or misinterpretation. The information herein is subject to change without notification.

Copyright © 2021 by GEOKON®
(Doc Rev K, 02/28/23)

Warranty Statement

GEOKON warrants its products to be free of defects in materials and workmanship, under normal use and service for a period of 13 months from date of purchase. If the unit should malfunction, it must be returned to the factory for evaluation, freight prepaid. Upon examination by GEOKON, if the unit is found to be defective, it will be repaired or replaced at no charge. However, the WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion or current, heat, moisture or vibration, improper specification, misapplication, misuse or other operating conditions outside of GEOKON's control. Components which wear or which are damaged by misuse are not warranted. This includes fuses and batteries.

GEOKON manufactures scientific instruments whose misuse is potentially dangerous. The instruments are intended to be installed and used only by qualified personnel. There are no warranties except as stated herein. There are no other warranties, expressed or implied, including but not limited to the implied warranties of merchantability and of fitness for a particular purpose. GEOKON is not responsible for any damages or losses caused to other equipment, whether direct, indirect, incidental, special or consequential which the purchaser may experience as a result of the installation or use of the product. The buyer's sole remedy for any breach of this agreement by GEOKON or any breach of any warranty by GEOKON shall not exceed the purchase price paid by the purchaser to GEOKON for the unit or units, or equipment directly affected by such breach. Under no circumstances will GEOKON reimburse the claimant for loss incurred in removing and/or reinstalling equipment.

Every precaution for accuracy has been taken in the preparation of manuals and/or software, however, GEOKON neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages or losses that result from the use of the products in accordance with the information contained in the manual or software.

TABLE of CONTENTS

1. INTRODUCTION	1
1.1 THEORY OF OPERATION	1
2. INSTALLATION	3
2.1 LIST OF SUGGESTED TOOLS	3
2.2 INSTALLATION IN BOREHOLES	3
2.2.1 <i>Preparing the Access Tube Anchor String</i>	3
2.2.2 <i>Installing the Access Tube Anchor String</i>	4
2.3 INSTALLATION IN FILLS	5
3. TAKING READINGS	6
4. DATA REDUCTION	7
APPENDIX A. SPECIFICATIONS	9
APPENDIX B. BATTERY REPLACEMENT	10

1. INTRODUCTION

The Model 1900 Magnetic Extensometer is designed to measure movement between magnetic targets anchored in the ground. It is normally installed in a borehole or directly in fill as it is placed. The primary use of the Magnetic Extensometer is the measurement of vertical compression in embankments, foundations, and fills and the movement of settlements in soft ground due to the placement of fills and embankments. It may also be used to measure heave.

1.1 Theory of Operation

Figure 1 shows the basic arrangement of the Magnetic Extensometer.

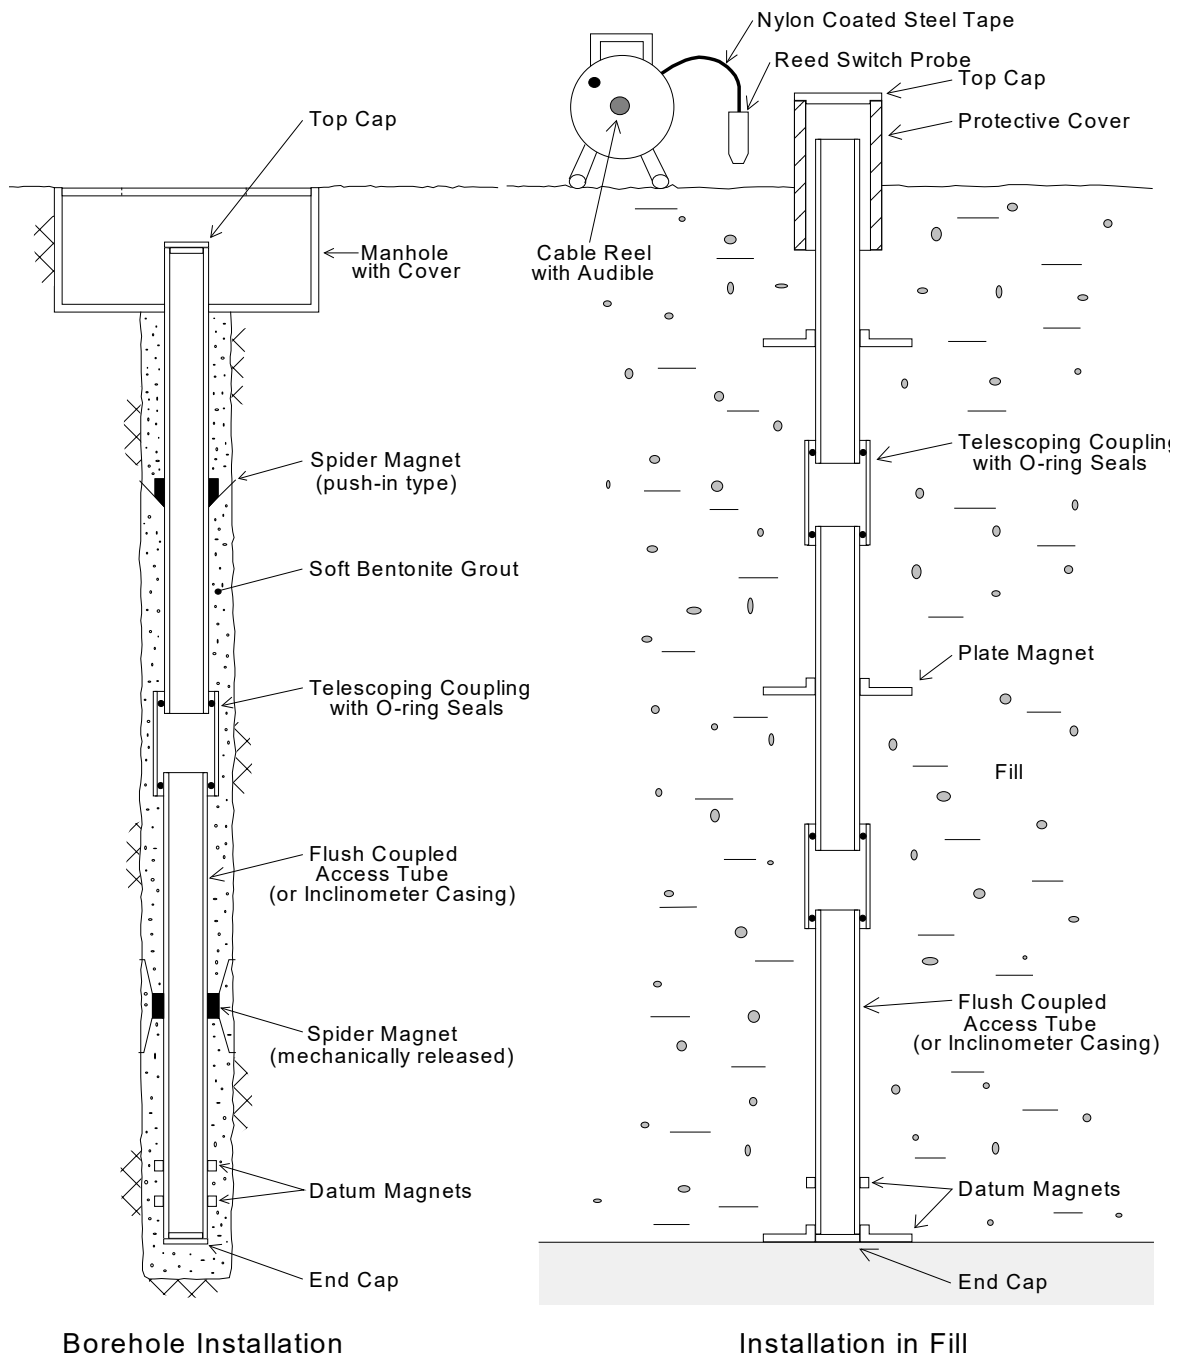


Figure 1 - Typical Magnetic Extensometer Installations

Anchor points with permanent magnets are anchored in the ground with a continuous access tube passing through their center. A reed switch probe is lowered inside the access tube on the end of a graduated measurement tape, which also contains two electrical conductors. As the probe passes each anchor, the magnets in the anchor cause the reed switch to close, this sounds a buzzer on the tape reel at the surface.

When the buzzer sounds the depth of the anchor is measured by reading the graduated tape opposite the top of the access tube.

In most cases, the bottom of the access tube is deep enough to be located in solid ground. A datum magnet anchored to the bottom of the access tube provides a stable benchmark datum to which all the other anchor measurements are referred to in order to calculate the absolute settlement of each anchor point relative to the benchmark.

If the bottom of the access tube cannot be located in the solid ground then it will be necessary to reference the position of each anchor to the top of the access tube and to transfer this elevation to an external benchmark by normal level surveying techniques.

2. INSTALLATION

2.1 List of Suggested Tools

- Black electrical tape (securing pull pins, packing pull cables, to protect loops)
- Masking tape (to hold pull cables during installation)
- Small cutting tool (to cut cable ties)
- Measuring tape (to place the anchors on the access tube at correct depth)
- Pen or Marker (to identify anchor location on access tube)
- PVC glue (for bottom cap)
- Steel saw (to cut access tubing)
- Long pushrod, typically threaded water pipe (extensible to reach the bottom of the hole)
- Color tapes to identify pull cables (or ID numbers)
- Small and medium plastic cable ties or cable clamps/grips (for making loops with the cable)
- Medium cutting tool (to cut pull cable)
- Small cutting tool (to cut cable ties)
- Measuring tape (to place the anchors on the access tube at correct depth)
- 300 ft. tape (to measure pull cable length)
- Working gloves (to hold anchor legs closed when working with the chain and the access tube) cable
- Grease for telescopic sections (and possibly for anchors)
- Clear water (to clean threads)
- Pipe wrench (for threaded water pipe)

2.2 Installation in Boreholes

Boreholes may be open, cased, grouted, or not grouted. In cased boreholes, it will be necessary to pull the casings after the string of access tubes and anchors have been installed inside it. In holes that are to be grouted using a soft bentonite grout there are two options: a) to pre-grout the borehole or b) to grout the borehole through a tremie pipe after the extensometer string has been lowered into position.

2.2.1 Preparing the Access Tube Anchor String

It is advisable to prepare the entire access tube string on a stretch of clean, level ground prior to installing it. In this way, there will be a minimum of delay during the actual installation since everything will be ready. Do not screw the sections together; just arrange them in their correct order with the anchors attached.

- 1) Begin by cementing the end cap onto the bottom section of the access tubing using PVC cement (not supplied by GEOKON).
- 2) Using three set screws, tighten the datum magnet onto the bottom section of the access tube about one meter above the bottom end cap. (Do not put the datum magnet too close to the bottom in case the access tube silts up.)

- 3) Select further sections of access tube and/or telescoping couplings. Position the spider anchors along the sections of access tubing in their desired locations. The spider anchors are attached to the access tube as shown in Figure 2.



Figure 2 - Anchor Assembly / Securing the Leaf Springs

- 4) Use the cable lanyards supplied to restrain the ends of the leaf springs. The pull-pin passes through the two looped ends of the cable lanyards holding the leaf springs snug against the access tube. Use 3/4-inch electricians tape (two turns) around the pull pin above and below the anchor, (see Figure 2). This holds the anchor pull-pin in place and makes it more difficult to pull the pin out, thus reducing the risk of prematurely tripping the anchor during installation.) It also holds the spider anchor in place preventing it from sliding up the access tube during installation.
- 5) Leaving the pull cable coiled, connect the loop on the end of the cable to the anchor pull-pin by clipping the hook through the eye of the pull cable.
- 6) Wrap a single layer of masking tape around the cable about 30 cm above the hook. This also will make it difficult for the pull-pin to be pulled prematurely.
- 7) Tape identification tags onto each end of the pull cables, e.g., use “#1” for the top anchor, “#2” for the next anchor, etc. Colored tapes can also be used for identification if identification tags are not available.

2.2.2 Installing the Access Tube Anchor String

- 1) Begin assembling the access tube string and pushing it into the borehole. If the hole is to be grouted after the string is placed, then the tremie pipe should be taped to the end of the access tube. Tape heavily enough to prevent the Tremie pipe from coming loose as it is pushed into the hole but not so heavy that it cannot be pulled loose deliberately at the start of grouting. If the borehole is already filled with grout or water, it will be necessary to fill the access tube with water to overcome the buoyancy forces.
- 2) When sections with spider anchors are added to the string, the pull-cables should be uncoiled and fed smoothly into the borehole along with the access tubing. **Do not allow any of the pull-cables be snagged, tangled, or pulled on, which could cause premature triggering of the anchors.** It may be advisable to have more than one person in charge of the pull-cables and tremie pipe.
- 3) Once the access tube has been lowered to the bottom of the borehole, it will be necessary to make sure that all the telescoping couplings are fully extended to accommodate the anticipated settlements. (If heave is being measured, the couplings

can be left closed or nearly closed.) This is best done by means of a long push rod (not supplied by GEOKON) made from any easily available water pipe with threaded connectors. The push rod assembly when joined should be sufficient length to reach the bottom of the access tube. To open the telescopic couplings push down on the push rod assembly and pull up on the access tubes.

- 4) Use the reed switch probe to verify the position of the anchors before they have been tripped. (See Section 3 for information on taking readings.) If the anchors have slipped it is still possible to remove the access tube and reposition them.
- 5) If the hole is to be grouted, it should be done at this time. Bentonite grout of the type that will remain soft and not impede the settlement of the ground (i.e., grout that will allow the anchor to follow the movement of the ground) should be used. (A typical grout is 43 kgm cement, 2 kgm bentonite and 40 kgm water, or enough water to make the mix thin enough to pump.)
- 6) If the hole is cased the casing can now be removed. Make sure that the access tubing does not pull upwards during this process.
- 7) The magnetic spider anchors can now be released beginning at the top anchor. Select pull-cable #1 and give it a quick hard pull.
- 8) Remove the pull-cable and anchor pull-pin completely from the borehole before tripping anchor #2. Repeat this process for all the anchors.
- 9) Install the plastic tape guide by sliding the access tube into the slots in the guide (see Figure 3).



Figure 3 - Tape Guide Mounted to Access Tube

2.3 Installation in Fills

Plate shaped magnetic anchors are used in fills. As the fill is placed the access tube is extended upwards by screwing on more sections along with telescoping couplings (make sure these are fully extended when installed). The plate anchors are laid on top of the fill surface as soon as it reaches the desired anchor elevation. They are then buried as more fill is placed.

Each new section of access tube that is added will alter the reed switch probe readings; however, the data reduction will still follow the method outlined in Section 4.

3. TAKING READINGS

Before taking readings, check the battery voltage by depressing the “TEST” button on the side of the tape storage reel; if no beep is heard the nine-volt alkaline battery needs to be replaced. (See Appendix B for battery replacement instructions.) Access to the battery holder is made by removing the three small screws around the periphery of the tape reel on the side that holds the test button and buzzer.

Readings are taken by lowering the reed switch probe down the access tube until an audible beep is heard from the buzzer in the tape reel. A reading of the graduated measurement tape is taken opposite the top of the access tube when the buzzer just starts to sound.

For greater accuracy, a second reading can be obtained at the same anchor by lowering the probe until the buzzer stays beeping. Take a measurement on the tape, as before, and average the two readings to get the position of the anchor.

Repeat this process for all the anchors and the datum anchor at the bottom of the hole.

4. DATA REDUCTION

If the datum magnet is located in solid ground (i.e., no settlement) then the true settlement, TS, of any intermediate anchor is given by the equation:

$$TS = (D_t - D_n) \text{ at } T_0 - (D_t - D_n) \text{ at } T_1$$

Equation 1 - True Settlement of An Intermediate Anchor

Where;

D_t is the distance from the datum magnet to the top of the access tube.

D_n is the distance from the top of the access tube to any one of the intermediate anchors; designated as D_1, D_2, D_3 , etc.

T_0 is Time 0 (the initial readings)

T_1 is Time 1 (a subsequent set of readings)

For example:

If;

$D_t = 29.214$ meters and $D_1 = 3.632$ meters at T_0

And

$D_t = 28.943$ meters and $D_1 = 3.595$ meters at T_1

Then;

$TS = (29.214 - 3.632) - (28.943 - 3.595) = (25.582) - (25.348) = 0.234$

Hence anchor D_1 has settled 0.234 meters

Assuming the datum is located in a non-displacing formation, the settlement of the top of the access tube, S, can be determined by the equation:

$$S = D_t \text{ at } T_0 - D_t \text{ at } T_1$$

Equation 2 - Settlement of the Top of Access Tube

For example, using the values from the previous example:

If;

$D_t = 29.214$ meters at T_0

And

$D_t = 28.943$ meters at T_1

Then;

$S = 29.214 - 28.943 = 0.271$ meters

Similarly, the compression of the ground between the top of the access tube and anchor any intermediate anchor, C, is given by the equation:

$$C = S - TS$$

Equation 3 - Compression of the Ground

For example, using the values from the previous examples:

If;

$$S = 0.271 \text{ meters}$$

And

$$TS = 0.234 \text{ meters}$$

Then;

$$C = 0.271 - 0.234 = 0.037 \text{ meters.}$$

If it is required that all measurements be referred to the top of the access tube, then the actual elevation of the borehole anchors can be computed by subtracting the measured distances D_1 , D_2 , D_3 , etc. from the surveyed elevation of the top of the access tube. The settlement of each anchor is then the observed difference of elevation from one survey to the next.

APPENDIX A. SPECIFICATIONS

Cable Lengths:	30, 50, 100, 150, 200 m; 100, 125, 200, 300 ft.
Resolution:	±1 mm (±0.04")
Repeatability:	±3 mm (±0.12")
Temperature Range:¹	-30 to +80° C
Probe Construction:	Stainless Steel
Probe Dimensions (L x Ø):	178 × 19 mm (7" × 0.75")
Access Tube:	PVC 1" Sch. 80 (33 mm O.D.)
Inclinometer Casing	70 mm (2.75") O.D.
Telescoping Section:	1 m (3.28 ft.) Fully compressed: 460 mm (18.1")
Telescoping Section Range of movement:	300 mm (11.8")
Plate Magnet Material:	PVC
Plate Magnet Dimensions: (L × W × D)	300 mm × 300 mm × 9.5 mm (11.8" × 11.8" × 0.37")
Spider Magnet Material:	Body: ABS Plastic Legs: Hardened 17-7 SS
1900-7A Spider Magnet Dimensions: (L × O.D. × I.D.)	Closed: 430 × 70 × 34 mm (16.9" × 2.75" × 1.34") Released: 410 × 190 × 34 mm (16.1" × 7.5" × 1.34")
1900-7B Spider Magnet Dimensions: (L × O.D. × I.D.)	Closed: 430 × 120 × 73 mm (16.9" × 4.7" × 2.87") Released: 410 × 228 × 73 mm (16.1" × 9.0" × 2.87")
Leaf Spring (Spider Leg) Stiffness:	> 20N
Datum Magnet Material:	ABS Plastic
Datum Magnet Dimensions:	54 × 60 × 34 mm (2.13" × 2.36" × 1.34")
Borehole Size:³	102-216 mm (4-8.5")
Power:	9V Alkaline Battery

Table 1 - Model 1900 Specifications

Notes:

¹ Other ranges available on request

² Refer to the 6400,6500, and 6600 data sheets for complete inclinometer casing specifications

³ Other sizes available

APPENDIX B. BATTERY REPLACEMENT

To replace the battery, remove the three screws on the buzzer side flange of the reel. Remove the flange, being careful not to allow the tape to fall off the reel while doing so. Replace the nine-volt battery (located on the backside of the flange) with a new one. Make sure the + and - sides of the battery are in the correct positions. Reinstall the flange and the screws.