



48 Spencer Street  
Lebanon, NH 03766, USA  
Tel: 603-448-1562  
Fax: 603-448-3216  
Email: [geokon@geokon.com](mailto:geokon@geokon.com)  
<http://www.geokon.com>

*Instruction Manual*  
**Model 4999-12L/LE**  
**(LAB3)**  
**Lightning Arrestor Board**



No part of this instruction manual may be reproduced, by any means, without the written consent of Geokon, Inc.

The information contained herein is believed to be accurate and reliable. However, Geokon, Inc. assumes no responsibility for errors, omissions, or misinterpretation. The information herein is subject to change without notification.

Copyright © 2003-2021 by Geokon, Inc.  
(Doc Rev K, 03/01/2021)



## **Warranty Statement**

Geokon, Inc. warrants its products to be free of defects in materials and workmanship, under normal use and service for a period of 13 months from date of purchase. If the unit should malfunction, it must be returned to the factory for evaluation, freight prepaid. Upon examination by Geokon, if the unit is found to be defective, it will be repaired or replaced at no charge. However, the WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion or current, heat, moisture or vibration, improper specification, misapplication, misuse or other operating conditions outside of Geokon's control. Components which wear or which are damaged by misuse are not warranted. This includes fuses and batteries.

Geokon manufactures scientific instruments whose misuse is potentially dangerous. The instruments are intended to be installed and used only by qualified personnel. There are no warranties except as stated herein. There are no other warranties, expressed or implied, including but not limited to the implied warranties of merchantability and of fitness for a particular purpose. Geokon, Inc. is not responsible for any damages or losses caused to other equipment, whether direct, indirect, incidental, special or consequential which the purchaser may experience as a result of the installation or use of the product. The buyer's sole remedy for any breach of this agreement by Geokon, Inc. or any breach of any warranty by Geokon, Inc. shall not exceed the purchase price paid by the purchaser to Geokon, Inc. for the unit or units, or equipment directly affected by such breach. Under no circumstances will Geokon reimburse the claimant for loss incurred in removing and/or reinstalling equipment.

Every precaution for accuracy has been taken in the preparation of manuals and/or software, however, Geokon, Inc. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages or losses that result from the use of the products in accordance with the information contained in the manual or software.

## TABLE of CONTENTS

|   |          |
|---|----------|
| <b>1. INTRODUCTION.....</b>   | <b>1</b> |
| 1.1 DISCLAIMER .....  | 1        |
| 1.2 BASIC CIRCUIT.....  | 1        |
| <b>2. THEORY OF OPERATION .....</b>                                 | <b>2</b> |
| <b>3. INSTALLATION.....</b>   | <b>3</b> |
| 3.1 PLACEMENT .....   | 3        |
| 3.2 ESTABLISHING AN EARTH GROUND .....                              | 3        |
| 3.2.1 <i>Ground Rods</i> .....                                      | 3        |
| 3.2.2 <i>Measuring the Resistance of the Grounding System</i> ..... | 4        |
| 3.3 CONNECTING THE LAB3 BOARD TO EARTH GROUND .....                 | 4        |
| 3.4 PREPARING THE ENCLOSURE (4999-12LE MODELS ONLY) .....           | 5        |
| 3.5 WIRING.....   | 5        |
| 3.6 PROTECTING ANCILLARY EQUIPMENT .....                            | 5        |
| <b>4. COMPONENT SPECIFICATIONS .....</b>                            | <b>6</b> |

## FIGURES and TABLES

|  |   |
|--|---|
| FIGURE 1 - LAB3 SCHEMATIC .....  | 1 |
| FIGURE 2 - LAB3 LIGHTNING TRANSIENT PROTECTION .....                               | 2 |
| FIGURE 3 - SUGGESTED SETUP FOR MEASURING THE SOIL RESISTANCE OF A GROUND ROD ..... | 4 |
| TABLE 1 - LAB3 CIRCUIT BOARD WIRING .....  | 5 |

## 1. INTRODUCTION

Geokon Model 4999-12L Surge Protection Boards (LAB3) are designed to protect Geokon vibrating wire transducers from short duration high voltage surges that may be induced in transducer cables by lightning strikes. The LAB3 boards can be provided in three configurations:

Model 4999-12L-A for 5 Volt signals

Model 4999-12L-B for 12 Volt power and signals

Model 4999-12L-C for 24 Volt power and signals

The LAB3 board is designed for installation in the cable leading from the transducer to the datalogger, or in the datalogger itself. It is normally supplied inside a watertight Nema 4 Enclosure (Model 4999-12-LE).

### 1.1 Disclaimer

Please note that nothing can protect a system from a direct lightning strike, or one so close that it overloads the capacity of the LAB3 Board. Nor is it possible to state how far away the lightning strike must be to prevent sparking across the protective devices. Therefore, **use of the LAB3 device does not guarantee that damage will not occur in the event of a lightning strike.** Geokon, Inc. is not responsible for any damage or loss suffered in the event of a lightning strike or other severe weather.

### 1.2 Basic Circuit

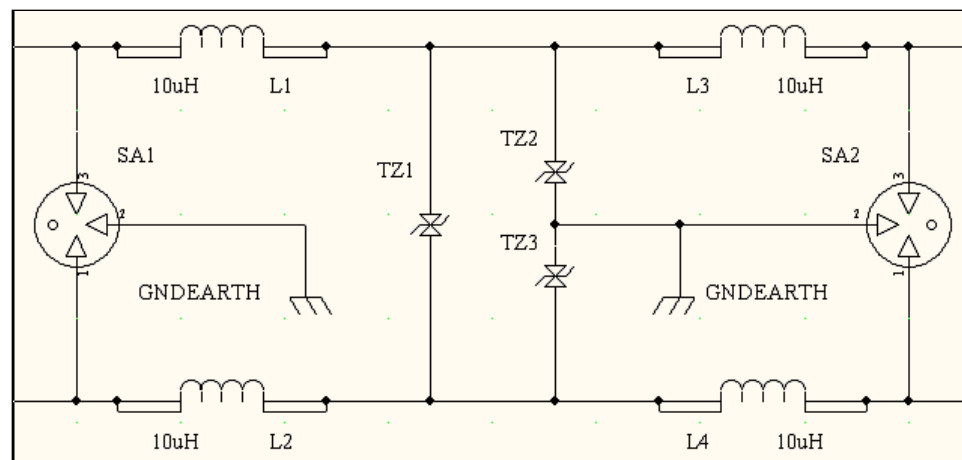



Figure 1 - LAB3 Schematic

## **2. THEORY OF OPERATION**

The primary protection is provided by a tripolar gas tube protection device. This device limits the energy sent to the protected circuit by switching from a high to a low impedance state in the space of a few nanoseconds when in the presence of a sufficiently high transient voltage. It is comprised of three electrodes separated by a fixed distance inside a hermetically sealed, gas-filled chamber. The outer electrodes are connected to the two leads of the circuit to be protected, and the center electrode is connected to an earth ground. When transients exceed the device's rated breakdown voltage, it begins arcing or conducting, thereby diverting the potentially damaging energy away from the protected circuit and towards the earth ground. Break down voltage is dependent on electrode spacing, inert gas type, gas pressure, and rise time of the transient voltage. In the present case, it is a nominal 230 volts.

While conducting, the voltage drop (or arc voltage) across the gas tube is quite low (typically less than 20 volts), hence the majority of the transient is dissipated in the earth ground, not in the gas tube itself or the protected circuit. When the transient has passed, the device returns to its former high impedance state.

The plots shown in Figure 2 illustrate energy content versus time of a lightning strike at various points in the lightning protection circuit.

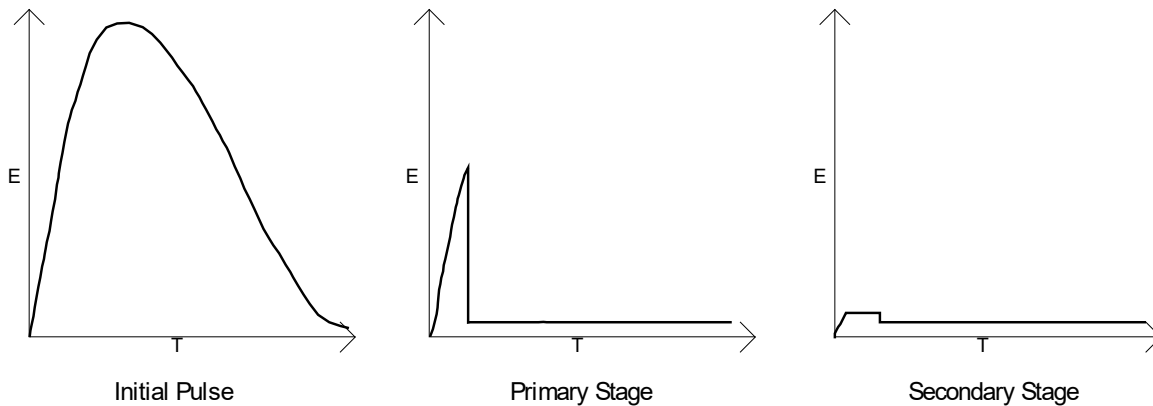

**Figure 2 - LAB3 Lightning Transient Protection**

The initial pulse enters the lightning board at either the SA1 or SA2 side and presents itself to the primary stage protection component (SA1 or SA2). The tripolar plasma surge arrester (rated at 5kA) will begin shunting the energy to ground when the nominal breakdown voltage, ~230V is exceeded. (Typically, 184-276 volts.)

The inductors L1 and L2 (or L3 and L4) delay the 230 volt pulse to the secondary stage protection to allow sufficient time for the breakdown voltage of the transzorb to be exceeded and therefore to actuate. The transzorb, TZ2 and TZ3, (rated at 1500 Watts), clamp the common mode voltage to a nominal 7.5 volts (4999-12L-A), 16 volts (4999-12L-B), or 30 volts (4999-12L-C). The transzorb TZ1, (rated at 1500 Watts), completes the secondary stage protection by clamping the normal mode voltage to 7.5 volts (4999-12L-A), 16 volts (4999-12L-B), or 30 volts (4999-12L-C).

The shield is protected by a plasma surge arrester rated at 2kA surge absorption with a 150-volt breakdown.

## **3. INSTALLATION**

### **3.1 Placement**

To protect a transducer it is recommended that the LAB3 Board be installed as close to the transducer as is practical, while still allowing access to the board. For piezometers installed in boreholes, this usually means installation at the top of the borehole where the cable comes out of the ground. In the event that the LAB3 Board is used to protect a multiplexer or a datalogger, locate the LAB3 board as close to the multiplexer or datalogger as possible.

### **3.2 Establishing an Earth Ground**

In order for the LAB3 board to be effective, **it is essential that a proper earth ground be established.** An inadequate grounding system may reduce the overall effectiveness of the surge protection. The lightning needs to encounter high impedance through the transducer and low impedance to earth ground. For best results, the resistance to ground should be 20 ohms or less. However, local ground conditions may preclude this. In order to achieve the lowest resistance possible, there are four variables to consider:

- 1) The use of a sufficient number of ground rods
- 2) Placement in the right soils
- 3) Sufficient depth
- 4) Soil conductivity enhancement

#### **3.2.1 Ground Rods**

When choosing ground rods use only higher quality types available in electrical supply houses (i.e., the ones with thick copper plating). If these are not available, a 1/2 inch diameter copper pipe will suffice. The length of the rods should be at least two meters. Ground rods with copper wire and ground lug are available from Geokon, model 8032-20.

The soil into which the ground rods are driven may not be soft enough to allow deep penetration in which case multiple rods may be necessary. Multiple rods can be connected in parallel when spaced at least six feet apart.

It is best to connect the ground wire to the ground rod using silver solder. If clamps are used, they may corrode over time and therefore require frequent inspection to ensure that they remain in good condition. No loops should be permitted in the ground wires.

As an alternative to rods, buried mats of wire mesh have been used.

Soil conductivity can be enhanced by charging the soil around the ground rod with a about a pound of rock salt or magnesium sulfate. Sandy soils have the highest resistance and may require these special enhancement measures. Be aware that frozen ground has a much higher resistance, (up to eight times higher), than unfrozen ground. Ground rods should be driven at least one-half to one meter below the frost line.

### 3.2.2 Measuring the Resistance of the Grounding System

In order to measure the ground resistance the following method is suggested. If a VOM is used it is necessary to take into account the AC component from ground currents and the DC component from electrolytic action. This mandates the use of two additional ground rods spaced six meters apart. Refer to Figure 3 and the procedure below.

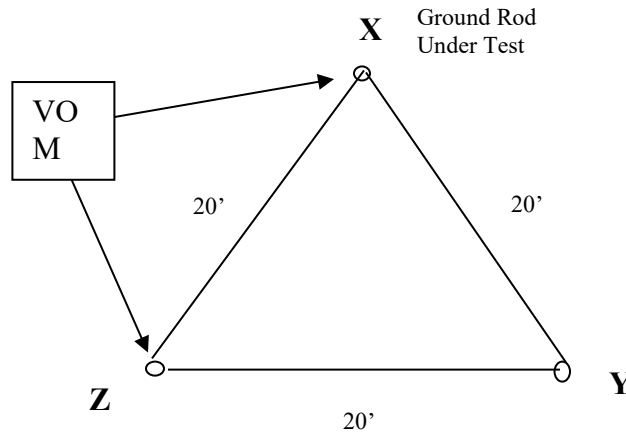


Figure 3 - Suggested setup for measuring the soil resistance of a ground rod

First measure and record the resistance between rods X and Y. Reverse the meter leads and record the reading. Calculate the average of the two readings and label it as (XY). Repeat this procedure between rods X and Z and between rods Y and Z then calculate the resistance to ground of rod X, the ground rod under test, from the formula:  
 Ground Rod Resistance = (XY) + (XZ) – (YZ)

### 3.3 Connecting the LAB3 Board to Earth Ground

(For Model 4999-12LE see Section 3.4.)

In order for the LAB3 board to be effective, **it is essential that a proper earth ground be established.**

The preferred way to achieve solid earth ground is to solder a length of 1/4" tinned copper wire braid from the EARTH solder pad (located on the back side of the board, adjacent to TB2) to a ground lug on the side of the enclosure the LAB3 will be mounted in. (All model 4999-12-LE [LAB3 board in a NEMA 4 Enclosure] manufactured at Geokon have the external Earth Ground lug connected to the circuit board in this fashion.)

Alternatively (but not recommended), earth ground connection may be made via the two E terminals on TB2 and TB4 or via the circuit board mounting holes. When the board is mounted to a grounded metal enclosure, electrical continuity is made from the mounting holes to the board via the standoffs. It may be necessary to scrape off some of the paint to get a low resistance value. An earth ground can then be made through the bolts holding the enclosure.

*In either case, connection to the earth ground must be completed by running a wire (at least 14 AWG) from the enclosure to a known or constructed earth ground (either a ground stake or local electrical system ground).*



### 3.4 Preparing the Enclosure (4999-12LE models only)

- 1) Open the enclosure by loosening the four corner screws and removing the lid. **Make sure that no dirt, water, or other contaminants are allowed to enter the enclosure.**
- 2) Locate and remove the bag containing the mounting feet. If desired, install the mounting feet onto the enclosure by following instructions included with the feet.
- 3) Loosen the nuts on the cable fittings and remove the white plastic dowels.
- 4) Insert the cables through the cable fittings.
- 5) Wire the conductors of the cables into the terminal strips per Table 1 in Section 3.5.
- 6) Tighten the cable fitting nuts. **This must be done to ensure that water does not enter the enclosure.**
- 7) Reinstall the lid onto the enclosure, making sure to tighten the screws evenly on all four sides so that no gap occurs between the lid and the enclosure.
- 8) Connect the enclosure to an established earth ground by running a wire (at least 14 AWG) from the ground lug on the side of the enclosure to a known or constructed earth ground (either a ground stake or local electrical system ground).

### 3.5 Wiring

Loosen the screws on the backside of the terminal strips. Wire the conductors of the cables into the terminal strips per Table 1 below. Tighten the corresponding screw on the terminal strip after inserting each conductor. Gently pull on the conductors to ensure they are adequately secured in the terminal strip. Note: The shield wire (no insulation), must be connected to the shield terminal (Position 5).

| Terminal Strip Position | Signal | Wire Color |
|-------------------------|--------|------------|
| 1                       | VW+    | RED        |
| 2                       | VW-    | BLACK      |
| 3                       | TH+    | WHITE      |
| 4                       | TH-    | GREEN      |
| 5                       | SHIELD | SHIELD     |
| E                       | EARTH  | -          |

Table 1 - LAB3 Circuit Board Wiring

### 3.6 Protecting Ancillary Equipment

The LAB3 board is a two-circuit protection device. TB1/TB3 pins one and two are provided for the first circuit to be protected. TB1/TB3 pin three and TB2/TB4 pin four are provided for the second circuit to be protected. The LAB3 can be provided in three configurations. Typical signals and systems that can be protected include: Five Volt signals such as CMOS and TTL logic by the 4999-12L-A; 12 Volt power supplies and signals by the 4999-12L-B; and 24 Volt power supplies, signals, and 4-20mA current loops by the 4999-12L-C.

**4. COMPONENT SPECIFICATIONS**

|                                     | <b>4999-12L-A</b>  | <b>4999-12L-B</b>                                    | <b>4999-12L-C</b>                                    |
|-------------------------------------|--|--|--|
| TRANSIENT<br>VOLTAGE<br>SUPPRESSOR: | Fairchild<br>SMCJ7.5CA<br>7.5V 1500W<br>Bi-directional                     | Fairchild<br>SMCJ16CA<br>16V 1500W<br>Bi-directional | Fairchild<br>SMCJ30CA<br>30V 1500W<br>Bi-directional |
| TRIPOLAR PLASMA<br>SURGE ARRESTOR:  | Bourns 2054-23-SM-RPLF<br>230V Breakdown Voltage<br>5kA current capability |  |  |
| BIPOLAR PLASMA<br>SURGE ARRESTOR    | Bourns 2051-15-SM-RPLF<br>150V Breakdown Voltage<br>2kA current capability |  |  |
| 10uH INDUCTOR:                      | Sumida CDRH125-100MC<br>10uH 4A  |  |  |